



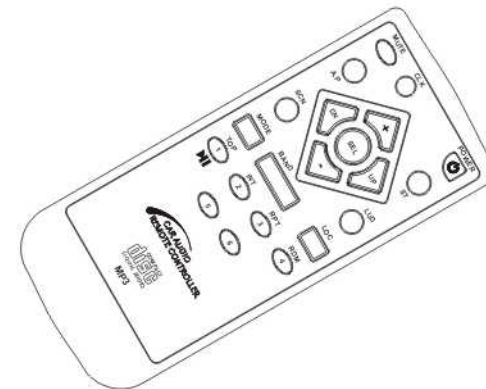

MCD-795

OWNER'S MANUAL

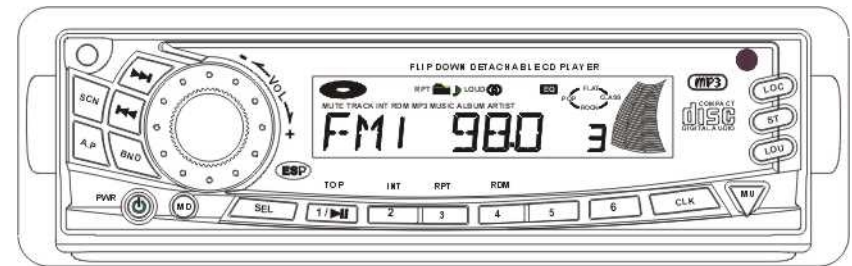

**ANTI-THEFT FLIP DOWN DETACHABLE SYSTEM
AUTO-LOADING DISC CD/ MP3 PLAYER
ELECTRONIC ANTI-SHOCK / SKIP PROTECTION
AM/FM-STEREO DIGITAL PLL TUNING RECEIVER
INFRARED REMOTE CONTROL**

DEAR CUSTOMER:

Thank you for your purchase of our audio product.

Selecting fine audio equipment such as the unit you have just purchased is only the start of your musical enjoyment. Now it is time to consider how you can maximize the fun and excitement your equipment offers.

We hope you get the most out of your equipment by playing it at a safe level.

One that lets the sound come through loud and clear without annoying blare or distortion, and, more important, without affecting your sensitive hearing.

Sound can be misled. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

- To establish a safe level:

Start your volume control at the lowest setting, then slowly increase the sound until you can hear it comfortably and clearly, and without distortion we want you listening for a lifetime.

- Once you have established a comfortable sound level:

Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

• ABOUT THIS MANUAL

This product features a number of sophisticated functions ensuring superior reception and operation. All are designed for the easiest possible use, but many are not self-explanatory.

This operation manual is intended to help you benefit fully from their potential and to maximize your listening enjoyment.

- We recommend that you familiarize yourself with the functions and their operation by reading through the manual before you begin using this product. In this operation manual, the Basic Operation for each sound source is outlined at the beginning of its explanation, covering simple operation for that source, such as merely playing music.

Remark:

- In addition to normal audio CD, this unit can play CD-R and CD-R/W disc that contain audio tracks as well; however, depending on the conditions of the recording equipment, recording program or the CD-R as well as CD-R/W disc itself, some CD-R or CD-R/W may not play.

- When making music CD with CD-R or CD-R/W disc, too high recording speed may result in poor signal quality and therefore, it is recommendable to select 24x or lower speed for CD-R recording and 4x or lower speed for CD-R/W recording.

SPECIFICATION

GENERAL

Supply Voltage	DC 13.8V. Negative Ground
Current Consumption	Max.10A
Power Output	25Watts X 4ch.
Number of channels	2 STEREO channels.
Unit Dimensions	178[W] X 165[D] X 50[H] mm.

FM SECTION

Frequency range	87.5MHz -107.9MHz
Effective sensitivity	3uV.
I.F Frequency	10.7MHz.

AM SECTION

Frequency range	530KHz - 1710KHz
Effective sensitivity	40dB.
I.F Frequency	450KHz

RCA LINE OUT (OPTION)

Output	1200mV @ CD MAX.
--------	------------------

CD PLAYER

System	MP3 Audio System.
Suitable CDs	MP3/ CD/CD-R/CD-RW Disc
Frequency characteristics	20Hz-100Hz ≤ 5dB 10KHz-20KHz ≤ 5dB.
S/N Ratio to CD	50dB [1KHz]

LOCATION AND FUNCTION OF CONTROLS

Fig. 1

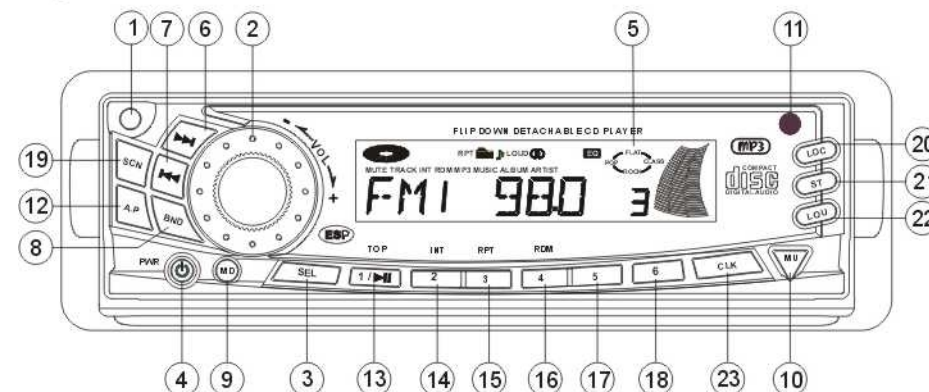


Fig. 2


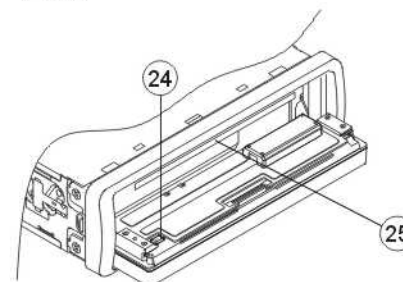


Fig. 3

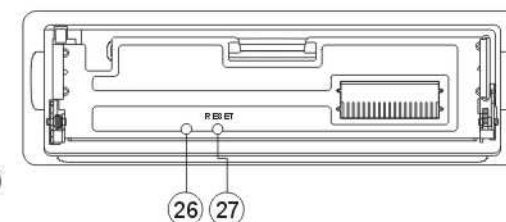

1. OPEN BUTTON

Press the OPEN button to fold down the front control panel. Then a CD can be inserted into the CD slot or ejected by pressing the EJ button at the rear of the front control panel; After flipping down the front panel, pull panel forward to remove it from the chassis.

2.3. SEL BUTTON (Select) AND VOL KNOB

a) Press the SEL button briefly, it is activated as selecting each mode of E. VOL. -> VOLUME -> BASS -> TREBLE -> BALANCE -> FADER -> In each mode, the waiting time is about 5 seconds, and the time waiting time is over, it returns to the last display mode of tuner or CDP mode.

VOLUME CONTROL

- 1) The volume can be adjusted at any time by rotating the VOL knob as select mode has been initially defaulted at volume mode.
- 2) The volume can be also obtained by continuously pressing the SEL button until the character VOL appear on the LCD display, then rotate the VOL knob to adjust the volume.

BASS CONTROL

- 1) Press SEL button to select the bass mode until BAS appears on the display.
- 2) Rotate the VOL knob to adjust the bass.

TREBLE CONTROL

- 1) Press SEL button to select the treble mode until TRE appears on the display.
- 2) Rotate the VOL knob to adjust the treble.

BALANCE CONTROL

- 1) Press SEL button to select the balance mode until BAL appears on the display.
- 2) Rotate the VOL knob to adjust the left/right speaker balance.

FADER CONTROL

- 1) Press SEL button to select the balance mode until FAD appears on the display.
- 2) Rotate the VOL knob to adjust the front/rear speaker balance.

- b) When pressed longer 2 seconds, it is activated as cyclical mode of following functions for user's selection.

-> BEEP (2nd/ALL/OFF) -> SEEK1/ 2-> DSP(OFF/POP/ROCK/CLASSIC/FLAT) -> VOL LAST/VOLADJ mode.

After selecting the desired mode, rotate the VOL knob to select one setup item of the desired mode.

BEEP 2ND, BEEP ALL, BEEP OFF MODE

The situation of beep sound is selected. The 3 mode is selected as also rotating the VOL knob.

- Beep 2nd mode:

The beep is only generated when an allotted double key is pressed long (1 second).

- Beep all mode:

The beep is generated when every key is pressed.

- Beep off mode:

The beep sound is disabled when a key is pressed.

SEEK 1/SEEK 2 mode:(Only available during radio operation)

SEEK 1: Press and hold the >>| or |<< button to seek up or down for the strong signal stations. And the seek stops when received a strong signal station.

SEEK 2: Press and hold the >>| or |<< button to seek up or down for the strong signal stations. But the seek does not stop when received a strong signal stations excepting release the >>| or |<< button.

VOL LAST/VOLADJ

VOL LAST: The radio switches on at the actual volume it had when it was last switched off.

VOLADJ: Rotating the VOL knob you can pre-select a constant switch-on volume.

4. POWER ON/OFF

When the unit is power off, the unit comes to ON by pressing any button on the front panel (except the OPEN key or the EJ key). It also can turn on the unit to insert a disc into CD slot. When the unit is power on, press and hold the power button for more than 0.5 seconds, the unit goes into power off mode.

5. LCD Display

TROUBLE SHOOTING

Before using the check list please make all the connections first.


If you still have questions after going through the checklist, please consult your local customer service representative.

Common Symptoms	Cause	Solution
There is no power.	The car ignition is switched off.	If the power supply is properly connected to the car accessory, switch the ignition key to " ON " or " ACC " .
	The fuse has blown.	Replace another fuse according to the wiring diagram.
The CDs cannot be loaded.	Presence of CD disc inside the player	Remove the disc in the player then put a new upward
The CDs are loaded only halfway into the CD tray.	The transport screws have not been removed.	Remove the transport screws before using.
The device does not work correctly (EJECT, LOAD, PLAY)	Inserting the disc in upside down	Insert the compact disc with the label facing upward
	The surface of CD is extremely dirty or it is damaged.	Clean the CD or try another CD, if this works correctly, the first CD is properly damaged.
	Temperature inside the car is too high.	Cool off until the ambient temperature returns to normal
There is no sound.	The volume control is set too low.	Turn up the volume properly.
	The device has not been correctly connected.	Check the power and earth connection according to the wiring diagram.
The operation keys do not work	1.The built-in microcomputer is not operating properly due to noise 2.Front panel is not properly fix into its place	1. Switch the device off and on again. Or press the RESET button to resume the program. 2. Reinstall the front panel
The sound of the CD player skips	The installation angle is more than 30 degrees	Adjust the installation angle to less than 30 degrees
	The surface of the road is uneven.	Wait until the road becomes smoother before playing the CD.
	The surface of CD is extremely dirty or it is damaged.	Clean the CD or try another CD, if this works correctly, the first CD is properly damaged.
No radio reception.	The antenna cable is not connected.	Insert the antenna cable firmly into the antenna socket of the device.
In automatic search mode the radio does not stop at a transmitting station.	The transmission signals are too weak.	Tune in to a radio station manually.

PRECAUTION OF DISC PLAY:

Cleaning the CD:

Before playing a CD, wipe it off with a clean, dust-free cleaning cloth. Wipe the disc in the direction of the arrow.

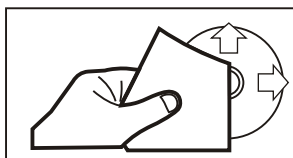


Always insert the CD with the label side facing upwards.

If the CD is inserted with the printed side facing downwards, the device may be damaged.



Note: If there is already a CD in the CD slot, do not try to insert a second CD. This may damage the device.

Always hold CDs by the edge. In order to keep the CD clean do not touch the surface. Pull out the CD as shown below.

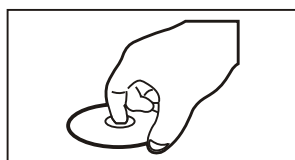

Do not attach any sticker or adhesive tape on the CD.

Do not expose the CD to direct sunlight or sources of heat such as heating vents. Do not leave CDs in a car if it is parked in direct sunlight as that will lead to a considerable rise in the temperature inside the car.

Note: Do not use any solvents such as petrol or thinning agents.

Commercially available cleaning substances or antistatic spray. This will damage the device.

6.7. TUNE, SEEK, TRACK, SKIP UP / DOWN BUTTONS

a) During RADIO mode:

Press the >>| or |<< button shortly to manual tune up/down for the desired radio station frequency with step by step.

Press and hold the >>| or |<< button for longer 0.5 seconds, to automatically tune up/down for the radio station frequency of strong signal.

b) During CD/MP3 playback mode:

Press the >>| button briefly to play next track. Press the |<< button once to play the current track from the beginning of the current track.

Press the |<< button twice continuously to play the previous track.

When the >>| or |<< button is pressed long (more than 1 seconds) for skip forwards or backwards.

8. BAND BUTTON

Press the BND button briefly to select the radio broadcasting band you would like to hear. The MW/FM band is toggled cyclically through the tuning bands ->FM 1-> FM 2-> FM 3 -> MW 1->MW 2 ->.

9. MODE BUTTON

1) When a CD/MP3 disc is existed inside the CD slot, press the MODE button shortly to change between CD/MP3 and RADIO mode each other.

The LCD display appears radio reception information when you change it to radio mode; The LCD display appears CD/MP3 playback information when you change it to CD/MP3 playback mode.

2) When there is no a disc inside the CD slot, the button has not the function of mode changing.

10. MUTE BUTTON

This button serves to switch the MUTED state on/off.

Press the MUTE button to suppress the loudspeaker temporarily, and press again to resume listening. The muted state will be also released when the MODE, BAND, SEL button is pressed and VOL knob on the front panel is used.

11. INFRARED REMOTE CONTROL SENSOR

12. A.P BUTTON (Auto-storage /Preset scan)

During radio mode:

1) when long pressing for more than 1 seconds, the radio searches from the current frequency and checks the signal strength level until 1 cycle search is finished. And then 6 strongest stations frequency are preset to the corresponding preset memory numbered bank. The auto-storage operation is implemented in the each selected band. When the auto-storage operation is finished, the radio execute the Preset Scan

2) when short pressing, the radio searches for each preset station in the current band. When the field strength level is more than the threshold level of stop level, the radio is holding at that preset number for 5 seconds with releasing mute, and than search again.

During MP3 mode:

Press the A.P button short, it is activated as cyclical selecting song mode as following: -> TRACK SEARCH -> DIRECTORY SEARCH-> THE FIRST CHARACTER SEARCH ->

1) In TRACK SEARCH selecting song mode, the MP3 T 000 will be visible on the LCD display and the hundreds digit 0 that the MP3 disc contain will flash. Rotate the VOL knob to select and enter the number on the flashing digit place from 1 to 9.

Then press the SEL button to confirm the entered number and the 0 on the tens digit will be flashing.

Rotate the VOL knob to select and enter the number on the flashing digit from 1 to 9.

Then press the SEL button to confirm the entered number and the 0 on the units place digit will be flashing.

Rotate the VOL knob to select and enter the number on the flashing digit from 1 to 9.

After finishing enter all the number of the song serial number on the flashing digit, press the SEL button to play the corresponding track.

2) In DIRECTORY SEARCH selecting song mode, the root folder will be visible on the LCD will display. (If there is not a root folder in the current MP3 disc, you will found a root named ROOT.)

Then rotate the VOL knob to select a desired folder.

And then press the >>| or |<< button to select a desired track in the folder.

Finally press the SEL button to play the selected track.

3) In the FIRST CHARACTER SEARCH selecting song mode, the A---....., will be visible on the LCD display. (If there are filenames its first character are A, the.....is the first file name its first character is A by the order of A~Z and 0~9; otherwise, the.....is NONE.)

Rotate the VOL knob to select files that the first character by the order of A~Z and 0~9.

Then press the >>| or |<< button to select one file its first character is the selected one. Finally press the SEL button to play the selected file.

13-18. PRESET STATION MEMORY AND TOP/PAUSE, INT, RPT, RDM BUTTONS

a) During radio mode:

When pressed short, these buttons select a preset station directly.

If the six buttons are pressed for more than 2 seconds, the station currently being listened to is memorized into the selected preset button.

b) During CD/MP3 mode:

- Press the TOP/PAUSE button briefly to interrupt the playback of the disc.

Press again to resume normal playback of the CD/MP3.

- Press the TOP/PAUSE button and hold for approximately 0.5 seconds to play the first track of the current disc.

- Press the INT button to play the first 10 seconds part of each track.

Press again to stop scan, while the currently selected track will be played.

- During MP3 mode, press the INT button and hold for more than 0.5 seconds to play the first 10 seconds part of each track in current folder.

- Press the RPT button to play the current track repeatedly.


Press again to cancel this function.

INSTALLATION METHOD


This is an anti-theft installation method.

The main unit wears a METAL MOUNTING SLEEVE.


Please connect the wiring, eg, the Power Supply, the Speakers and the Antenna according to the requirements of this Instruction Manual, then install the metal mounting sleeve into the car as per the diagram illustrated below.

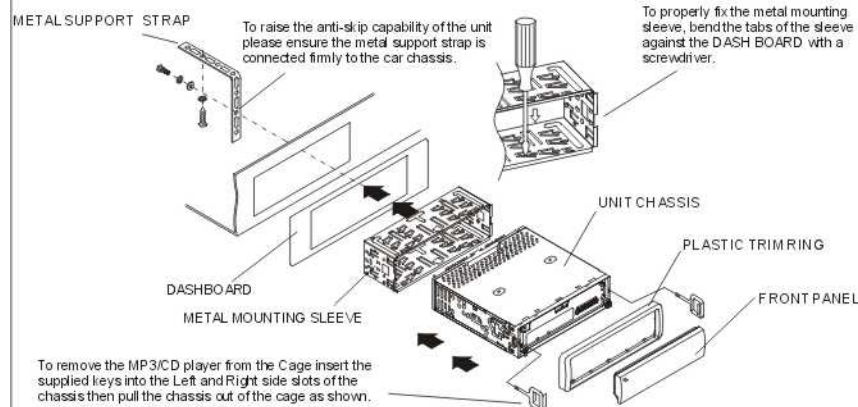

NOTE

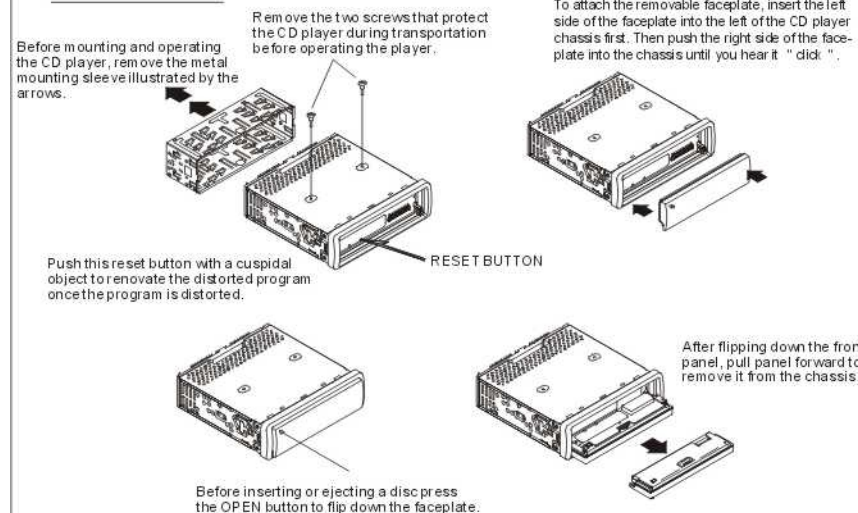

WIRING DIAGRAM

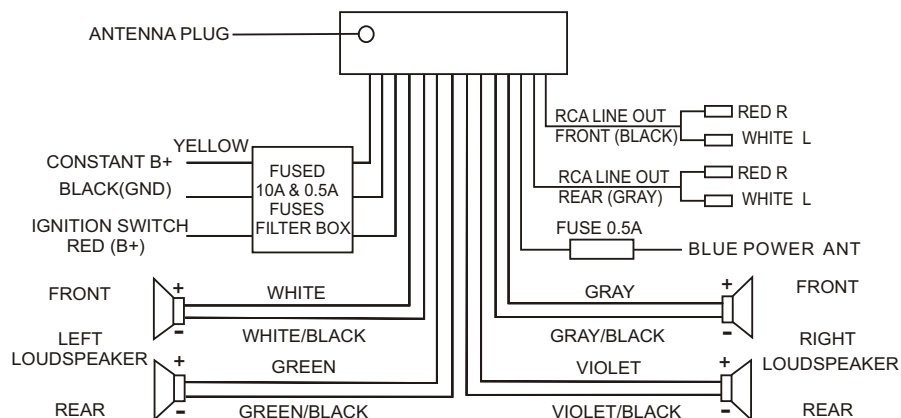

Note:

1. Make sure use ONLY speakers with 4 ohm load impedance.
2. Do not allow the auto antenna wire and ground to touch each other.

- During MP3 mode, press the RPT button and hold for more than 0.5 seconds to play the current folder repeatedly. Press again to cancel this function.
 - Press the RDM button to play all tracks on disc in random order. Press again to cancel this function.
 - During MP3 mode, Press the RDM button and hold for more than 0.5 seconds to play the track in random order in the current folder. Press again to cancel this function.
- c) During the normal playback of CDs in MP3 format:
- Press the radio preset button 6 and 5 to move up and down 10 tracks at a time.

19. SCAN BUTTON

Press the SCN button to scan the radio frequency. If a valid signal has detected, the current frequency will be hold and blinked for 5 seconds, then press SCN again to stop scan and remain the current frequency; otherwise, the radio will go on to scan the other radio frequency five seconds later.

20. LOC BUTTON

Radio station search mode is divided by this LO/DX switch, this button can be used to control an attenuator in the tuner during search. The detecting level of seek, scan, auto-memory will be reduced as much as the attenuated level of the tuner. In radio mode, press the LOC button to change local reception or distance reception. Note: This button is only for FM reception. In AM mode, LOC is void.

21. ST/MO BUTTON

In radio mode, press the ST briefly to select stereo or mono sound mode.

22. LOUDNESS BUTTON

When press shortly, the LOUD mode is turned on, its to enhance the bass sound effect when the volume level is low. Press again to cancel the loudness effect.

23. CLOCK BUTTON

Press the CLK button briefly to display time for 5 seconds on the display, and then returns to its previous display unless the button is pressed again. Then press the CLK button and hold for more than 1 seconds until the real time flashes on the display. Then you can adjust HOUR or MINUTE by rotating the VOL knob.

24. EJECT KEY

In the power on state, the loaded disc can be ejected by pressing the EJ key.

25. CD SLOT

26. FLASHING LED

When the front control panel is removed this indicator flashes.

27. RESET BUTTON

Before operating the unit for the first time, or after replacing the car battery or changing the connections. You must reset the unit.

Press this button with a cuspidal object. This operation will erase the clock setting and some stored contents.

OPERATION OF REMOTE CONTROL:

Note:

Before use this remote control, please make sure turn on the device by pressing the power button on the front control panel.

1. Power On/Off.

2. Mute Button

3. Loudness Button

4. Level/MENU UP Button 5. SEL/MENU Button

6. Level/MENU Down Button 7. MO/ST Button

8. A.P Button 9. Band Button 10. Mode Button

11. Tune/Seek Up And Track Skip Up/FF Button

12. Tune/Seek Down And Track Skip Down/REW Button


13. SCAN BUTTON 14. Clock Display /Setting Button 15. LO/DX Button

16. CD Track TOP/▶/Radio Preset 1 17. CD Track INT/Radio Preset 2

18. CD Track RPT/Radio Preset 3 19. CD Track RDM/Radio Preset 4

20. Radio Preset 5

21. Radio Preset 6

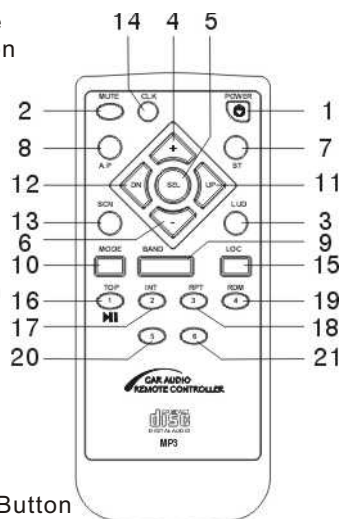

MAINTENANCE OF REMOTE CONTROL

Before using the remote control, pull out the insulating patch. This patch was installed to insulate the battery from draining until ready to use.




BATTERY INFORMATION:

Lithium Battery: CR2025 3V

Battery Life: Approximately 6 months.

Replacing the Battery from the Remote Control:

- 1) Remove the battery holder by pressing the locking tab with your thumb and pulling it out.
- 2) Replace the battery with the same type and the “ + ” side facing up.
- 3) Gently push in the holder until securely locked into place.

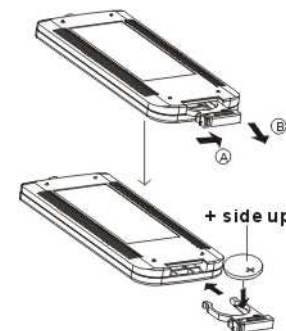

WARNING:

- Do not recharge, disassemble or dispose of in fire.
- Battery leakage may cause damage to the unit.
- To avoid the risk of accident, keep batteries out of reach of children.